



**samlex**power

**1000 Watt  
Pure Sine Wave  
DC-AC Inverter**

**PST-100S-12A  
PST-100S-24A**

**Owner's  
Manual**

Please read this  
manual before  
operating your  
DC-AC inverter.

# INDEX

Safety Instructions.....	2,3
Inverters - General Information .....	4,5,6
Characteristics of Sinusoidal AC Power.....	7
Advantages of Sine Wave Inverters .....	8
AC Power Distribution and Grounding.....	9,10,11
Limiting Electromagnetic Interference (EMI) .....	11
Powering direct/embedded SMPS .....	12
Principle of Operation .....	13
Layout .....	13
Specifying Batteries, Chargers and Alternators .....	14,15,16,17,18
Installation.....	19,20,21,22,23
Operation .....	24,25
Protection Against Abnormal Conditions.....	25,26
Troubleshooting Guide .....	27,28
Specifications.....	29
Warranty.....	30

# SAFETY INSTRUCTIONS

Please read these instructions before installing or operating the inverter to prevent personal injury or damage to the inverter.

## GENERAL

### Installation and wiring compliance

- Installation and wiring must comply with the local and national electrical codes and must be done by a certified electrician.

### Preventing electrical shock

- Always connect the grounding connection on the inverter to the appropriate grounding system
- Disassembly / repair should be carried out by qualified personnel only.
- Disconnect all AC and DC side connections before working on any circuits associated with the inverter. Turning the on/off switch on the inverter to off position may not entirely remove dangerous voltages
- Be careful when touching bare terminals of capacitors. The capacitors may retain high lethal voltages even after the power has been removed. Discharge the capacitors before working on the circuits

### Installation environment

- The inverter should be installed indoor only in a well ventilated, cool, dry environment
- Do not expose to moisture, rain, snow or liquids of any type.
- To reduce the risk of overheating and fire, do not obstruct the suction and discharge openings of the cooling fan
- To ensure proper ventilation, do not install in a low clearance compartment

### Preventing fire and explosion hazards

Working with the inverter may produce arcs or sparks. Thus, the inverter should not be used in areas where there are inflammable materials or gases requiring ignition protected equipment. These areas may include spaces containing gasoline powered machinery, fuel tanks, battery compartments

### Precautions when working with batteries.

- Batteries contain very corrosive diluted sulphuric acid as electrolyte. Precautions should be taken to prevent contact with skin, eyes or clothing
- Batteries generate hydrogen and oxygen during charging resulting in evolution of explosive gas mixture. Care should be taken to ventilate the battery area and follow the battery manufacturer's recommendations.
- Never smoke or allow a spark or flame near the batteries.
- Use caution to reduce the risk of dropping a metal tool on the battery. It could spark or short circuit the battery or other electrical parts and could cause an explosion.
- Remove metal items like rings, bracelets and watches when working with batteries. The batteries can produce a short circuit current high enough to weld a ring or the like to metal and thus cause a severe burn.
- If you need to remove a battery, always remove the ground terminal from the battery first. Make sure that all the accessories are off so that you do not cause a spark.

## **INVERTER RELATED**

### **Preventing paralleling of the AC output**

The AC output of this inverter cannot be synchronised with another AC source and hence, it is not suitable for paralleling. The AC output of the inverter should never be connected directly to an electrical breaker panel / load center which is also fed from the utility power / generator. Such a connection may result in parallel operation of the different power sources and AC power from the utility / generator will be fed back into the inverter which will instantly damage the output section of the inverter and may also pose a fire and safety hazard. If an electrical breaker panel / load center is fed from an inverter and this panel is also required to be powered from additional alternate AC sources, the AC power from all the AC sources like the utility / generator / inverter should first be fed to a manual selector switch and the output of the selector switch should be connected to the electrical breaker panel / load center.

To prevent possibility of paralleling and severe damage to the inverter, never use a simple jumper cable with a male plug on both ends to connect the AC output of the inverter to a handy wall receptacle in the home / RV.

### **Connecting to multi-wire branch circuits**

Do not directly connect the hot side of the inverter to the two hot legs of the 120 / 240 VAC electrical breaker panel / load centre where multi-wire ( common neutral ) branch circuit wiring method is used for distribution of AC power. This may lead to overloading / overheating of the neutral conductor and is a risk of fire.

A split phase transformer ( isolated or auto-transformer ) of suitable wattage rating ( 25 % more than the wattage rating of the inverter ) with primary of 120 VAC and secondary of 120 / 240 VAC ( Two 120 VAC split phases 180 degrees apart) should be used. The hot and neutral of the 120 VAC output of the inverter should be fed to the primary of this transformer and the 2 hot outputs ( 120 VAC split phases ) and the neutral from the secondary of this transformer should be connected to the electrical breaker panel / load centre.

### **Preventing input over voltage**

It is to be ensured that the input voltage of the inverter does not exceed 16.5 VDC for PST-100S-12A or 33 VDC for PST-100S-24A to prevent permanent damage to the inverter. Please observe the following precautions:

- Ensure that the maximum charging voltage of the battery charger / alternator / solar charge controller is below 16.5 VDC for PST-100S-12A or 33 VDC for PST-100S-24A
- Do not use unregulated solar panels to charge a battery. Under cold ambient temperatures, the output of the solar panel may exceed 18 VDC for 12 V system or 36 VDC for 24 V system. Always use a charge controller between the solar panel and the battery.
- Do not connect the inverter to a battery system with a voltage higher than the rated battery input voltage.

### **Preventing reverse polarity on the input side**

When making battery connection on the input side, make sure that the polarity of battery connection is correct (Connect the positive of the battery to the positive terminal of the inverter and the negative of the battery to the negative terminal of the inverter). If the input is connected in reverse polarity, DC fuse(s) inside the inverter will blow and may also cause permanent damage to the inverter.

**DAMAGE CAUSED BY REVERSE POLARITY IS NOT COVERED BY YOUR WARRANTY!**

## INVERTERS - GENERAL INFORMATION

### Why an inverter is needed

The utility grid supplies you with alternating current (AC) electricity. AC is the standard form of electricity for anything that “plugs in” to the utility power. Direct current (DC) electricity flows in a single direction. Batteries provide DC electricity. AC alternates its direction many times per second. AC is used for grid service because it is more practical for long distance transmission. For more details read “**Characteristics of Sinusoidal AC Power**” on page 7.

An inverter converts DC to AC, and also changes the voltage. In other words, it is a power adapter. It allows a battery-based system to run conventional AC appliances directly or through conventional home wiring. There are ways to use DC directly, but for a modern lifestyle, you will need an inverter for the vast majority, if not all of your loads ( **in electrical terms, “loads” are devices that use electrical energy**).

Incidentally, there is another type of inverter called grid-interactive. It is used to feed solar (or other renewable) energy into a grid-connected home and to feed excess energy back into the utility grid. This inverter is **NOT grid interactive**

### Inverter should meet the application

To choose an inverter; you should first define your needs. Where is the inverter to be used? Inverters are available for use in buildings (including homes), for recreational vehicles, boats, and portable applications. Will it be connected to the utility grid in some way? Electrical conventions and safety standards differ for various applications, so don't improvise.

### Electrical Standards

The DC input voltage must conform to that of the electrical system and battery bank. 12 volts is recommended for small, simple systems. 24 and 48 volts are the common standards for higher capacities. A higher voltage system carries less current, which makes the system wiring cheaper and easier.

The inverter's AC output must conform to the conventional power in the region in order to run locally available appliances. The standard for AC utility service in North America is 120 and 240 Volts at a frequency of 60 Hertz (cycles per second). In Europe, South America, and most other places, it is 230 volts at 50 Hertz.

### Power capacity – “Continuous” and “Surge”

How much load can an inverter handle? Its power output is rated in Watts. Read details under “**Characteristics of Sinusoidal AC Power**” on page 7. There are two levels of power rating -a **continuous rating** and a **surge rating**. Continuous means the amount of power the inverter can handle for an indefinite period of hours. When an inverter is rated at a certain number of Watts, that number generally refers to its continuous rating. The “**surge power**” indicates the power to handle instantaneous overload of a few seconds to provide the higher power required to start certain type of devices and appliances.

## Loads that require "surge power" to start

Resistive types of loads (like incandescent lamps, toaster, coffee maker, electric range, iron etc) do not require extra power to start. Their starting power is the same as their running power.

Some loads like induction motors and high inertia motor driven devices will initially require a very large starting or "surge" power to start from rest. Once they have started moving and have attained their rated speed, their power requirement reduces to their normal running power. The **surge** may last up to 5 seconds.

TVs and microwave ovens also require surge power for starting. The manufacturers' specification of the appliances and devices indicates only the running power required. The surge power required has to be guessed at best. See below under "Sizing of inverter for loads that require starting surge".

If an inverter cannot efficiently feed the surge power, it may simply shut down instead of starting the device. If the inverter's surge capacity is marginal, its output voltage will dip during the surge. This can cause a dimming of the lights in the house, and will sometimes crash a computer.

Any weakness in the battery and cabling to the inverter will further limit its ability to start a motor. A battery bank that is undersized, in poor condition, or has corroded connections, can be a weak link in the power chain. The inverter cables and the battery interconnect cables must be sized properly. The spike of DC current through these cables is many hundreds of amps at the instant of motor starting. Please follow the instructions under "Installation - DC side connections" on pages 20 & 21.

## Sizing of inverter for loads that require starting surge

Observe the following guideline to determine the continuous wattage of the inverter for powering loads that require starting surge. (Multiply the running watts of the device/appliance by the Surge Factor)

**\*NOTE:** The surge power rating specified for this inverter is valid for duration of less than 1 second. This very short duration may not be sufficient to start motor based loads which may require up to 5 seconds to complete starting process. Hence, for purposes of sizing the inverter, use only the continuous power rating of this inverter.

Type of Device or Appliance	Surge Factor for Determining the Continuous x Wattage of the Inverter (No. of times the running power rating of the device/appliance)
Refrigerator / Freezer	5
Air Compressors	4
Dishwasher	3
Automatic Washer	3
Sump pump	3
Furnace fans	3
Industrial motors	3
Portable kerosene / diesel fuel heater	2
Circular saw	3
Bench Grinder	3

## **Power rating of Microwaves**

The power rating of the microwave generally refers to the cooking power. The electrical power consumed by the microwave will be approximately 2 times the cooking power. The “**surge power**” of the inverter should be 2 times the electrical power (i.e., 4 times the cooking power). Please note that the surge power of the microwave is not as long as the motor load and hence, the surge power of the inverter can be considered to determine adequacy of meeting the starting surge power

## **Powering a water supply pump**

A water well or pressure pump often places the greatest demand on the inverter. It warrants special consideration. Most pumps draw a very high surge of current during start up. The inverter must have sufficient surge capacity to handle it while running any other loads that may be on. It is important to size an inverter sufficiently, especially to handle the starting surge (If the exact starting rating is not available, the starting surge can be taken as 3 times the normal running rating of the pump). Oversize it still further if you want it to start the pump without causing lights to dim or blink.

In North America, most pumps (especially submersibles) run on 240 VAC, while smaller appliances and lights use 120 VAC. To obtain 240 VAC from a 120 VAC inverter, use a 120 VAC to 240 VAC transformer. If you do not already have a pump installed, you can get a 120 volt pump if you don't need more than 1/2 HP.

## **Idle power**

Idle power is the consumption of the inverter when it is on, but no loads are running. It is “wasted” power, so if you expect the inverter to be on for many hours during which there is very little load (as in most residential situations), you want this to be as low as possible.

## **Phantom and idling loads**

Most of the modern gadgets draw some power whenever they are plugged in. Some of them use power to do nothing at all. An example is a TV with a remote control. Its electric eye system is on day and night, watching for your signal to turn the screen on. Every appliance with an external wall-plug transformer uses power even when the appliance is turned off. These little loads are called “phantom loads” because their power draw is unexpected, unseen, and easily forgotten.

A similar concern is “idling loads.” These are devices that must be on all the time in order to function when needed. These include smoke detectors, alarm systems, motion detector lights, fax machines, and answering machines. Central heating systems have a transformer in their thermostat circuit that stays on all the time. Cordless (rechargeable) appliances draw power even after their batteries reach a full charge. If in doubt, feel the device. If it's warm, that indicates wasted energy.

## CHARACTERISTICS OF SINUSOIDAL AC POWER

### Voltage, current, power factor, types of loads

The voltage waveform of 120 VAC, 60 Hz mains / utility power is like a sine wave. In a voltage with a sine wave-form, the instantaneous value and polarity of the voltage varies with respect to time and the wave-form is like a sine wave. In one cycle, it slowly rises in the positive direction from 0 V to a peak positive value +  $V_{peak} = 170$  V, slowly drops to 0 V, changes the polarity to negative direction and slowly increases in the negative direction to a peak negative value -  $V_{peak} = 170$  V and then slowly drops back to 0 V. There are 60 such cycles in 1 sec. Cycles per second is called the "**frequency**" and is also termed "**Hertz (Hz.)**". If a linear load is connected to this type of voltage, the load will draw current which will also have the same sine wave-form. However, the peak value of the current will depend upon the impedance of the load. Also, the phase of the sine wave-form of the current drawn by the linear load may be the same or lead / lag the phase of sine wave-form of the voltage. This phase difference determines the "**Power Factor** (mathematically = the cosine of the phase difference)" of the load. In a **resistive type of load** (like incandescent lamps, heaters etc) the sine wave-form of the current drawn by the load has 0 phase difference with the sine wave-form of the voltage of the AC power source. The Power Factor of a resistive load is unity (1). **The rated output power (in Watts) of the inverters is normally specified for resistive type of loads that have unity (1) Power Factor.** In a **reactive type of load** (like electric motor driven loads, fluorescent lights, computers, audio / video equipment etc), the phase of the sine wave-form of the current drawn by the load may lead or lag the sine wave-form of the AC voltage source. In this case, the power factor of reactive loads is lower than unity (1) – generally between 0.8 and 0.6. **A reactive load reduces the effective wattage that can be delivered by an AC power source**

### RMS and peak values

As explained above, in a sine wave, the instantaneous values of AC voltage (**Volt, V**) and current (**Ampere, A**) vary with time. Two values are commonly used – Root Mean Square (**RMS**) value and peak value. For simplicity, RMS value can be considered as an average value. **Mathematically, Peak Value = 1.414 x RMS value.** For example, the 120 VAC, 60 Hz. mains / utility power is the RMS value. The peak value corresponding to this is =  $1.414 \times 120 = 170V$ .

**The values of the rated output voltage and current of an AC power source are their RMS values**

### AC power – Watts / VA

The power rating of an AC power source is designated in Volt Amperes (VA) or in Watts (W)

Power in Volt Amperes (VA) = RMS Volts (V) x RMS Amps (A)

Power in Watts = RMS Volts (V) x RMS Amps (A) x Power Factor

**NOTE :** The rated power of the inverter in Watts (W) is normally designated for a linear, resistive type of load that draws linear current at unity (1) power factor. If the load is linear and reactive type, the rated power of the inverter in watts will be limited to its normal rated power in watts (W) x Power Factor. For example, an inverter rated for 1000 W ( at unity power factor) will be able to deliver only 600 watts to a reactive type of load with a power factor of 0.6.

## ADVANTAGES OF A PURE SINE-WAVE INVERTER OVER A MODIFIED SINE-WAVE INVERTER

The output voltage of a sine-wave inverter has a sine wave-form like the sine wave-form of the mains / utility voltage. In a sine wave, the voltage rises and falls smoothly with a smoothly changing phase angle and also changes its polarity instantly when it crosses 0 Volts. In a modified sine wave, the voltage rises and falls abruptly, the phase angle also changes abruptly and it sits at 0 Volts for some time before changing its polarity. Thus, any device that uses a control circuitry that senses the phase (for voltage / speed control) or instantaneous zero voltage crossing (for timing control) will not work properly from a voltage that has a modified sine wave-form.

Also, as the modified sine wave is a form of square wave, it is comprised of multiple sine waves of odd harmonics (multiples) of the fundamental frequency of the modified sine wave. For example, a 60 Hz modified sine wave will consist of sine waves with odd harmonic frequencies of 3rd (180 Hz), 5<sup>th</sup> (300 Hz.), 7th (420 Hz.) and so on. The high frequency harmonic content in a modified sine wave produces enhanced radio interference, higher heating effect in motors / microwaves and produces overloading due to lowering of the impedance of low frequency filter capacitors / power factor improvement capacitors.

### Advantages of sine-wave inverters:

- The output wave-form is a sine-wave with very low harmonic distortion and clean power like utility supplied electricity.
- Inductive loads like microwaves and motors run faster, quieter and cooler
- Reduces audible and electrical noise in fans, fluorescent lights, audio amplifiers, TV, fax and answering machines
- Prevents crashes in computers, weird print outs and glitches in monitors

Some examples of devices that may not work properly with modified sine wave and may also get damaged are given below:

- Laser printers, photocopiers, magneto-optical hard drives
- The built-in clocks in devices such as clock radios, alarm clocks, coffee makers, bread-makers, VCR, microwave ovens etc may not keep time correctly.
- Output voltage control devices like dimmers, ceiling fan / motor speed control may not work properly (dimming / speed control may not function)
- Sewing machines with speed / microprocessor control
- Transformer-less capacitive input powered devices like (i) Razors, flashlights, night-lights, smoke detectors etc (ii) Re-chargers for battery packs used in hand power tools. **These may get damaged. Please check with the manufacturer of these types of devices for suitability**
- Devices that use radio frequency signals carried by the AC distribution wiring.
- Some new furnaces with microprocessor control / Oil burner primary controls
- High intensity discharge (HID) lamps like Metal Halide lamps. **These may get damaged. Please check with the manufacturer of these types of devices for suitability**
- Some fluorescent lamps / light fixtures that have power factor correction capacitors. **The inverter may shut down indicating overload**

## AC POWER DISTRIBUTION AND GROUNDING

**CAUTION!** PLEASE NOTE THAT THE DC INPUT CONNECTIONS ON THIS INVERTER ARE NOT CONNECTED (BONDED) TO THE METAL CHASSIS OF THE INVERTER. BOTH THE INPUT AND OUTPUT CONNECTIONS ARE ISOLATED FROM EACH OTHER. SYSTEM GROUNDING, AS REQUIRED BY NATIONAL / LOCAL ELECTRICAL CODES / STANDARDS, IS THE RESPONSIBILITY OF THE USER / SYSTEM INSTALLER.

### Conductors for electrical power distribution

For single phase transmission of AC power or DC power, two conductors are required that will be carrying the current. These are called the “current-carrying” conductors. A third conductor is used for grounding to prevent the build up of voltages that may result in undue hazards to the connected equipment or persons. This is called the “non current-carrying” conductor (will carry current only under ground fault conditions)

### Grounding terminology

The term “grounded” indicates that one or more parts of the electrical system are connected to earth, which is considered to have zero voltage or potential. In some areas, the term “earthing” is used instead of grounding.

A “grounded conductor” is a “current-carrying” conductor that normally carries current and is also connected to earth. Examples are the “neutral” conductor in AC wiring and the negative conductor in many DC systems. A “grounded system” is a system in which one of the current-carrying conductors is grounded

An “equipment grounding conductor” is a conductor that does not normally carry current (except under fault conditions) and is also connected to earth. It is used to connect the exposed metal surfaces of electrical equipment together and then to ground. Examples are the bare copper conductor in non-metallic sheathed cable (Romex®) and the green, insulated conductor in power cords in portable equipment. These equipment-grounding conductors help to prevent electric shock and allow over-current devices to operate properly when ground faults occur. The size of this conductor should be coordinated with the size of the over-current devices involved

A “grounding electrode” is the metallic device that is used to make actual contact with the earth. Other types of grounding electrodes include metal water pipes and metal building frames.

A “grounding electrode conductor” is the conductor between a common single grounding point in the system and the grounding electrode

“Bond” refers to the connection between the “grounded conductor”, the “equipment grounding” conductors and the “grounding electrode” conductor. Bonding is also used to describe connecting all of the exposed metal surfaces together to complete the equipment-grounding conductors.

## Grounded Electrical Power Distribution System

The National Electrical Code (NEC) requires the use of a “grounded electrical distribution system”. As per this system, one of the two current-carrying conductors is required to be grounded. This grounded conductor is called the “Neutral / Cold / Return”. As this conductor is bonded to earth ground, it will be at near zero voltage or potential. There is no risk of electrical shock if this conductor is touched. The other current carrying conductor is called the “Line / Live / Hot”. The connection between the “Neutral” and the grounding electrode conductor is made **only at one point in the system**. This is known as the **system ground**. This single point connection (bond) is usually made in the service entrance or the load center. If this connection is inadvertently made in more than one place, then unwanted currents will flow in the equipment grounding conductors. These unwanted currents may cause inverters and charge controllers to be unreliable and may interfere with the operation of ground-fault detectors and over-current devices.

**NOTE: A current-carrying conductor that is not bonded to the earth ground cannot be called a “neutral”. This conductor will be at an elevated voltage with respect to the earth ground and may produce electrical shock when touched.**

### Polarity and color codes for power cords and plugs for AC devices and appliances

Single phase 120 VAC, 60 Hz AC devices and appliances use 2 pole, 3 wire grounding configuration for connection to the AC power source. The plug of the power cord has three pins – two flat pins ( also called poles ) that are connected to the two current-carrying conductors and a round pin which is connected to a non-current carrying conductor ( this will carry current only during ground fault conditions ) . One flat pin is connected to a black current-carrying conductor which is also called “Line/Live/Hot” pole. The other flat pin is connected to the white current-carrying conductor also called the “Neutral / Return / Cold” pole. The third round pin is connected to the non-current carrying green “equipment grounding conductor”. This green “equipment grounding conductor” is bonded to the metal chassis of the device or appliance.

### AC output connections

The 120 VAC, 60 Hz version of the inverter uses NEMA 5-15R receptacles for connecting the AC output of the inverter to devices and appliances fitted with a NEMA 5-15P plug. The two rectangular slots are connected to the current-carrying conductors of the AC power source inside the inverter. The round slot is the “equipment grounding” connection and is internally connected to the metal chassis of the inverter.

**NOTE:** For the 120 VAC, 60 Hz NEMA 5-15R receptacles used in this inverter, the current carrying conductor connected to the longer rectangular slot is bonded to the metal chassis of the inverter. Hence, when the metal chassis of the inverter is connected to the earth ground, the longer rectangular slot is grounded to the earth ground.

## Grounding to earth or to other designated ground

For safety, the metal chassis of the inverter is required to be grounded to the earth ground or to the other designated ground (For example, in a mobile RV, the metal frame of the RV is normally designated as the negative DC ground). An equipment grounding bolt with a wing nut has been provided for grounding the metal chassis of the inverter to the appropriate ground. (Located under the DC input terminals)

When using the inverter in a building, connect a # 8 AWG insulated stranded copper wire from the above equipment grounding bolt to the earth ground connection ( a connection that connects to the ground rod or to the water pipe or to another connection that is solidly bonded to the earth ground ). The connections must be tight against bare metal. Use star washers to penetrate paint and corrosion.

When using the inverter in a mobile RV, connect a # 8 AWG insulated stranded copper wire from the above equipment grounding bolt to the appropriate ground bus of the RV (usually the vehicle chassis or a dedicated DC ground bus ). The connections must be tight against bare metal. Use star washers to penetrate paint and corrosion.

## LIMITING ELECTRO-MAGNETIC INTERFERENCE (EMI)

The inverter contains internal switching devices which generate conducted and radiated electromagnetic interference (EMI).

The magnitude of EMI is limited to acceptable levels by circuit design but can not be entirely eliminated. The effects of EMI will also depend upon a number of factors external to the power supply like proximity of the inverter to the EMI receptors, types and quality of connecting wires and cables etc. EMI due to factors external to the inverter can be reduced as follows:

- Ensure that the inverter is firmly grounded to the ground system of the building or the vehicle
- Locate the inverter as far away from the EMI receptors like radio, audio and video devices as possible
- Keep the DC side cables between the battery and the inverter as short as possible.
- Twist the DC side cables. This will partially cancel out the radiated noise from the cables
- Shield the DC side cables with metal sheathing / copper foil / braiding
- Use co-axial shielded cable for all antenna inputs (instead of 300 ohm twin leads)
- Use high quality shielded cables to attach audio and video devices to one another
- Do not operate other high power loads when operating audio / video equipment

# POWERING DIRECT / EMBEDDED SWITCHED MODE POWER SUPPLY (SMPS)

## Non-linear nature of current drawn by Switched Mode Power Supplies

Power supplies are used to convert AC voltages like 120 VAC to various DC voltages like 3.3 V, 5 V, 12 V, 24 V, 48 V etc. Majority of modern day electronic devices use embedded general purpose Switch Mode type of Power Supplies (SMPS) to drive the electronic circuitry. General purpose Switch Mode Power Supplies (SMPS) ( **excepting those that have power factor correction** ) have one major disadvantage – the current drawn by them from the AC power source has a **non linear waveform** ( the waveform is not sinusoidal as the input voltage waveform but is in the form of short, larger value pulses around the area of + Vpeak and -Vpeak ). This is due to the charging of the input filter capacitor(s) mostly around the positive and negative peak portions of the sinusoidal input voltage. The degree of non-linearity is measured by the "**Crest Factor**":

$$\text{Crest Factor} = \text{Peak Current} / \text{RMS Current}$$

In a linear load, the Crest Factor is 1.414. However, in a general purpose SMPS, due to its non linear nature, this factor will be much higher - in the region of up to 4. This will mean that for a particular rated RMS current (applicable for a linear load), the general purpose SMPS will draw much larger peak currents – approx. up to 4 times more than its rated RMS current.

Inverters are protected against over current ( also called overloading ) by either clipping the peaks of the output voltage ( this will result in a sine wave becoming a square wave, reduction in the RMS value of the output voltage and generation of harmonics and electrical noise ) or by shutting down the output voltage of the inverter completely. Thus, if an inverter / generator is used to power a general purpose SMPS, it will be forced to deliver higher peak currents resulting in premature triggering of the inverter's / generator's over current protection circuits. Thus, for safe operation, the continuous RMS current rating of the inverter / generator should be at least 2.8 times the continuous RMS current rating of the general purpose SMPS it is required to power:

$$\text{Peak current of inverter} = \text{Peak current of SMPS}$$

or

$$\text{RMS current of inverter} \times 1.414 = \text{RMS current of SMPS} \times 4$$

or

$$\text{RMS current of inverter} = 4/1.414 \times \text{RMS current of SMPS}$$

or

$$\text{RMS current of inverter} = 2.8 \times \text{RMS current of SMPS}$$

**Alternatively, the continuous power rating of the inverter / generator in Watts / VA should be at least 2.8 times the continuous power rating of the SMPS in Watts / VA**

## PRINCIPLE OF OPERATION

The inverter converts the rated DC voltage of the battery to 120 V, 60 Hz. AC voltage.

The voltage conversion takes place in two stages. In the first stage, the rated DC voltage of the battery is converted to a high voltage DC using high frequency switching and Pulse Width Modulation (PWM) technique. In the second stage, the high voltage DC is converted to 120 V, 60 Hz. sine-wave AC again using PWM technique. This is done by using a special wave shaping technique where the high voltage DC is switched at a high frequency and the pulse width of this switching is modulated with respect to a reference sine-wave.

## LAYOUT



- 1 120V AC output receptacles
- 2 Power on/off Switch
- 3 Green L.E.D. - Power output status
- 4 Red L.E.D. - Overload
- 5 Red L.E.D. - Over temperature
- 6 Input terminals (back of unit -not shown)  
RED - Positive (+)  
BLACK or WHITE - Negative (-)
- 7 Cooling Fan (back of the unit - not shown)
- 8 Grounding lug (back of the unit - not shown)
9. Modular jack for optional Remote Control (bottom of the unit - not shown)

## SPECIFYING BATTERIES, CHARGERS & ALTERNATORS

The inverter will require **Deep Cycle Lead Acid Batteries** of appropriate capacity.

Lead-acid batteries can be categorized by the type of application: automotive service - Starting/Lighting/Ignition (SLI, a.k.a. cranking) and **deep cycle** service

### SLI Batteries

Everybody is familiar with the SLI batteries that are used for automotive starting and powering vehicular accessories. SLI batteries are designed to produce high power in short bursts but must be constantly recharged (normally with an alternator while driving). Vehicle starting typically discharges 1%-3% of a healthy SLI battery's capacity.

The automotive SLI battery is not designed for repeated deep discharge where up to 80 % of the battery capacity is discharged and then recharged. If an SLI battery is used for this type of application, its useful service life will be drastically reduced

### Deep Cycle Batteries

Deep cycle batteries are designed with thick-plate electrodes to serve as primary power sources, to have a constant discharge rate, to have the capability to be deeply discharged up to 80 % capacity and to repeatedly accept recharging. They are marketed for use in recreation vehicles (RV), boats and electric golf carts – so they may be referred to as RV batteries, marine batteries or golf cart batteries. There are two categories of deep cycle lead acid batteries – wet and sealed. A wet cell battery has a high tolerance to overcharging. However, it will release hydrogen gas when charging that must be properly vented and the water level must be checked frequently. Sealed batteries can either be Gel Cell or AGM (**A**bsorbed **G**lass **M**at). Both the Gel Cell and AGM are maintenance free, have no liquid to spill and gassing is minimal. The Gel Cell is the least affected by temperature extremes, storage at low state of charge and has a low rate of self discharge. An AGM battery will handle overcharging slightly better than the Gel Cell

### Units of Battery capacity

The battery capacity is the measure of the energy the battery can store and deliver to a load. It is determined by how much current any given battery can deliver over a stipulated period of time. The energy rating is expressed in **Ampere Hours (AH)**. As a bench mark, the battery industry rates batteries at 20 hour rate i.e. how many Amperes of current the battery can deliver for 20 hours at 80 ° F till the voltage drops to 10.5 Volts for 12 V battery and 21 V for 24 V battery. For example, a 100 AH battery will deliver 5 Amperes for 20 hours. Battery capacity is also expressed as **Reserve Capacity (RC)** in minutes. Reserve capacity is the time in minutes for which the battery can deliver 25 Amperes at 80 ° F till the voltage drops to 10.5 Volts for 12 V battery and 21 V for 24 V battery.

Approximate relationship between the two units is as follows:

$$\text{Capacity in AH} = \text{Reserve Capacity in RC minutes} \times 0.6$$

## Typical battery sizes

Below is a chart of some battery sizes applicable for powering inverters:

BCI * Group	Battery Voltage, V	Battery AH
27 / 31	12	105
4 D	12	160
8D	12	225
GC2**	6	220

\* Battery Council International

\*\* Golf Cart

## Reduction in usable capacity at higher discharge rates

As stated above, the rated capacity of the battery in AH is applicable at a discharge rate of 20 Hours. As the discharge rate is increased, the usable capacity reduces due to "Peukert Effect". This relationship is not linear but is more or less according to the table below:

**Table 1 Battery Capacity versus Rate of Discharge**

Hours of Discharge	Usable Capacity
20	100%
10	87%
8	83%
6	75%
5	70%
3	60%
2	50%
1	40%

Using the above table will show that a 100 AH capacity battery will deliver 100% (i.e. full 100 AH) capacity if it is slowly discharged over 20 hours at the rate of 5 Amperes. However, if it is discharged at a rate of 50 Amperes then theoretically, it should provide  $100 \text{ AH} \div 50 = 2$  hours. However, the Table above shows that for 2 hours discharge rate, the capacity is reduced to 50% i.e. 50 AH. Therefore, at 50 Ampere discharge rate the battery will actually last for  $50 \text{ AH} \div 50 \text{ Amperes} = 1$  Hour

## Depth of discharge and battery life

The more deeply a battery is discharged on each cycle, the shorter the battery life. Using more batteries than the minimum required will result in longer life for the battery bank. A typical cycle life chart is given at Table 2 below:

TABLE 2. – TYPICAL CYCLE LIFE CHART

Depth of Discharge % of AH Capacity	Cycle Life		
	Group 27 / 31	Group 8D	Group GC2
10	1000	1500	3800
50	320	480	1100
80	200	300	675
100	150	225	550

It is recommended that the depth of discharge should be limited to 50 %

## Loss of battery capacity at low temperatures

Batteries lose capacity in low temperatures. At 32 ° F, a battery will deliver about 70 to 80 % of its rated capacity at 80 ° F. If the air temperature near the battery bank is lower than 80 ° F, additional batteries will be needed to provide the same usable capacity. For very cold climates, an insulated / heated battery compartment is recommended.

## Series and parallel connection of batteries

When two or more batteries are **connected in series**, their voltages add up but their AH capacity remains the same. For example, when two 12 V, 105 AH batteries are connected in series, it becomes a 24 V, 105 AH battery. (Positive of the first battery is the positive terminal of the series connection. The negative of the first battery is connected to the positive of the second battery. The negative of the second battery is the negative of the series connection)

When two or more batteries are **connected in parallel**, their voltages remain the same but their capacities add up. For example, if two 12 V, 105 AH batteries are connected in parallel, their voltage remains 12 V but their capacity becomes  $105 \times 2 = 210$  AH (Connect the positive terminal of the first battery to the positive terminal of the second battery. These paralleled common positive terminals become the positive terminal of the parallel combination. Connect the negative terminal of the first battery to the negative terminal of the second battery. These paralleled common negative terminals becomes the negative terminal of the parallel combination)

## Sizing the Inverter Battery Bank

One of the most frequently asked question is, "how long will the batteries last?". This question cannot be answered without knowing the size of the battery system and the load on the inverter. Usually this question is turned around to ask "How long do you want your load to run?", and then specific calculation can be done to determine the proper battery bank size.

There are a few basic formulas and estimation rules that are used:

- Formula 1            Power in Watts (W) = Voltage in Volts (V) x Current in Amperes (A)  
Formula 2            For an inverter running from a 12 V battery system (PST-100S-12A), the DC current required from the 12 V batteries is the AC power delivered by the inverter to the load in Watts (W) divided by 10 & for an inverter running from a 24 V battery system (PST-100S-24A), the DC current required from the 24 V batteries is the AC power delivered by the inverter to the load in Watts (W) divided by 20.  
Formula 3            Energy required from the battery = DC current to be delivered (A) x time in Hours (H)

The first step is to estimate the total AC watts (W) of load(s) and for how long the load(s) will operate in hours (H). The AC watts are normally indicated in the electrical nameplate for each appliance or equipment. In case AC watts (W) are not indicated, formula 1 given above may be used to calculate the AC watts by multiplying 120 VAC by the AC current in Amperes . The next step is to derive the DC current in Amperes (A) from the AC watts as per formulae 2 above. **An example of this calculation for a 12V inverter is given below:**

Let us say that the total AC Watts delivered by the 12 V inverter = 1000 W

Then, using formula 2 above, the DC current to be delivered by the 12 V batteries =  $1000 \text{ W} \div 10 = 100 \text{ Amperes}$

Next, the energy required by the load in Ampere Hours (AH) is determined. For example, if the load is to operate for 3 hours then as per Formula 3 above:

Energy to be delivered by the 12 V batteries =  $100 \text{ Amperes} \times 3 \text{ Hours} = 300 \text{ Ampere Hours (AH)}$

Now, the capacity of the batteries is determined based on the run time and the usable capacity. From Table 1, (on page 15), the usable capacity at 3 Hour discharge rate is 60%. Hence, the actual capacity of the 12 V batteries to deliver 300 AH will be equal to  $300 \text{ AH} \div 0.6 = 500 \text{ AH}$

And finally, the actual desired rated capacity of the batteries is determined based on the fact that normally only 80% of the capacity will be available with respect to the rated capacity due to non availability of ideal and optimum operating and charging conditions. So the final requirements will be equal to:

$500 \text{ AH} \div 0.8 = 625 \text{ AH}$  (note that the actual energy required by the load was 300 AH)

It will be seen from the above that the final rated capacity of the batteries is almost 2 times the energy required by the load in AH

**Thus, as a thumb rule, the AH capacity of the batteries should be twice the energy required by the load in AH.**

For the above example, the 12 V batteries may be selected as follows:

- Use 6 Group 27/31, 12 V, 105 AH batteries in parallel to make up 630 AH, or
- Use 3 Group 8D, 12 V, 225 AH batteries in parallel to make up 675 AH

## **Charging Batteries**

The batteries can be charged by using good quality AC powered battery charger or from alternative energy sources like solar panels, wind or hydro systems. Make sure an appropriate battery charge controller is used. It is recommended that the batteries may be charged at 10% to 13 % of the Ampere Hour capacity (20 hour discharge rate). Also, for complete charging (return of 100 % capacity ), it is recommended that a 3 stage charger may be used (Constant current bulk charging followed by constant voltage boost / absorption charging followed by constant voltage float charging )

### **Batteries, alternators and isolators on vehicles / RVs**

It is recommended that for powering the inverter, one or more auxiliary deep cycle batteries should be used that are separate from the SLI battery. The inverter should be powered from the deep cycle batteries. For charging the SLI and the auxiliary deep cycle batteries, the output from the alternator should be fed to these two sets of batteries through a battery isolator of appropriate capacity. The battery isolator is a device that will allow the alternator to charge the two sets of batteries when the engine is running. The isolator will allow the inverter to be operated from the auxiliary batteries and also prevent the SLI battery from charging the auxiliary deep cycle batteries when the engine is not running. Battery isolators are available from auto / RV / marine parts suppliers

A majority of smaller vehicles have 40 to 105 Ampere alternator and RVs have 100 to 130 Ampere alternator. When in use, the alternators heat up and their output current capacity can drop by up to 25%. When heated up, their charging voltage may also not reach the desired absorption voltage and will result in return of only about 80% of the battery capacity. In case the current output of the standard alternator is not adequate to charge the two sets of batteries rapidly and fully to 100% of their capacity, use heavy duty alternator that can produce higher current and voltage required to charge multiple battery systems. These alternators are available with auto / RV parts suppliers.

# INSTALLATION

## GENERAL

### Installation and wiring compliance

- Installation and wiring must comply with the local and the national electrical codes and must be done by a certified electrician
- In building / residential applications, electrical codes do not allow permanent connection of AC distribution wiring to the inverter's AC output receptacles. The receptacles are intended for temporary (as needed) connection of cord connected loads only. **Read details under "AC Power Distribution and Grounding" on page 9.**
- The inverter does not have integral over current protection for the AC output side. Protection should be provided by the installer
- Over current protection of the cables from the battery to the inverter has to be provided by the installer
- The DC input positive and negative terminals are isolated from the chassis. Similarly, the neutral pole of the AC receptacles / the neutral wire is not bonded to the chassis. System grounding to suit the national / local electrical codes is to be undertaken by the installer. **Read details under "AC Power Distribution and Grounding" on page 9.**

### Preventing electrical shock

- Always connect the grounding connection on the inverter to the appropriate grounding system. **Read details under "AC Power Distribution and Grounding" on page 9.**

### Installation environment

- The inverter should be installed indoor only in a well ventilated, cool, dry environment
- Do not expose to moisture, rain, snow or liquids of any type.
- To reduce the risk of overheating and fire, do not obstruct the suction and discharge openings of the cooling fans.
- To ensure proper ventilation, do not install in a low clearance compartment
- Working with the inverter may produce arcs or sparks. Thus, the inverter should not be used in areas where there are inflammable materials or gases requiring ignition protected equipment. These areas may include spaces containing gasoline powered machinery, fuel tanks, battery compartments

### Mounting position of the inverter

- The inverter may be mounted horizontally on the top of a horizontal surface or under a horizontal surface. The inverter may be mounted on a vertical surface only horizontally (**the fan axis should always be horizontal i.e. the fans should not be pointing up or down**).

### Cooling by forced air fan ventilation

The inverter produces heat when operating. The amount of heat produced is proportional to the amount of power supplied by the inverter. A DC fan is used to provide forced air cooling of this inverter. The fan is thermostatically controlled and will be switched on only if the temperature of certain hot spot inside the inverter rises above a certain temperature. **At lower loads and / or at lower ambient temperatures, the fan may not switch on at all. This is normal.** The unit is protected against over-temperature due to failure of the fan / inadequate heat transfer. The AC output will be shut-down if the hot spot inside the inverter reaches a certain higher temperature.

## Precautions when working with batteries

Batteries contain very corrosive diluted sulphuric acid as electrolyte. Precautions should be taken to prevent contact with skin, eyes or clothing

- Batteries generate hydrogen and oxygen during charging resulting in evolution of explosive gas mixture. Care should be taken to ventilate the battery area and follow the battery manufacturer's recommendations.
- Never smoke or allow a spark or flame near the batteries.
- Use caution to reduce the risk of dropping a metal tool on the battery. It could spark or short circuit the battery or other electrical parts and could cause an explosion.
- Remove metal items like rings, bracelets and watches when working with batteries. The batteries can produce a short circuit current high enough to weld a ring or the like to metal and thus cause a severe burn.
- If you need to remove a battery, always remove the ground terminal from the battery first. Make sure that all the accessories are off so that you do not cause a spark.

## DC SIDE CONNECTIONS

The DC input power to the inverter is derived from deep cycle batteries of the required capacity. Read under "**Specifying Batteries, Chargers and Alternators**" on **page 14** for details on sizing and charging of batteries.

### Preventing input over voltage

It is to be ensured that the input voltage of the inverter does not exceed 16.5 VDC for PST-100S-12A or 33 VDC for PST-100S-24A to prevent permanent damage to the inverter. Please observe the following precautions:

- Ensure that the maximum charging voltage of the battery charger / alternator / solar charge controller is below 16.5 VDC for PST-100S-12A or 33 VDC for PST-100S-24A
- Do not use unregulated solar panels to charge a battery. Under cold ambient temperatures, the output of the solar panel may exceed 18 V for 12V system or 36 V for 24V system. Always use a charge controller between the solar panel and the battery.
- Do not connect the inverter to a battery system with a voltage higher than the rated battery input voltage.

### Preventing reverse polarity on the input side

When making battery connection on the input side, make sure that the polarity of battery connection is correct (Connect the positive of the battery to the positive terminal of the inverter and the negative of the battery to the negative terminal of the inverter). If the input is connected in reverse polarity, DC fuse(s) inside the inverter will blow and may also cause permanent damage to the inverter

### Connection from the batteries to the DC input side of the inverter – cable and fuse size

The flow of electric current in a conductor is opposed by the resistance of the conductor. The resistance of the conductor is directly proportional to the length of the conductor and inversely proportional to its cross-section (thickness). The resistance in the conductor produces undesirable effects of voltage drop and heating. **Thus, thicker and shorter conductors are desirable.** The size (thickness / cross-section) of the conductors is designated by AWG (American Wire Gauge).

**Please note that a smaller AWG # denotes a thicker size of the conductor up to AWG #1, e.g. AWG #2 is thicker than AWG #4.**

The DC input circuit is required to handle very large DC currents and hence, the size of the cables and connectors should be selected to ensure minimum voltage drop between the battery and the inverter. Thinner cables and loose connections will result in poor inverter performance and will produce abnormal heating leading to risk of insulation melt down and fire.

Use oil resistant, multi-stranded copper wire cables rated at 90 ° C minimum. Do not use aluminium cable as it has higher resistance per unit length. Cables can be bought at a marine / welding supply store

A battery is an unlimited source of current. Under short circuit conditions, a battery can supply thousands of Amperes of current that will melt the cables and pose a safety and fire hazard. To prevent damage due to short circuit in the battery cables, an appropriate fuse should be used that has the required current interrupting capacity (termed AIC - Ampere Interrupting Capacity). For this purpose, fuse with AIC rating of 10000 A at 14 V / 5000 A at 32 V or higher should be used. Class T fuses or MRBF Series of fuses (made by Cooper Bussmann) may be used. The fuse should be installed in line with the Positive terminal of the battery & should be located within 7" from the battery terminal.

The following size of cables and fuses are recommended. The distance shown is the distance between the battery and the inverter. The recommended size of the cables will limit the voltage drop to approximately 2% ( The length of the cable for calculating the voltage drop has been taken as 2 times the distance between the inverter and the battery assuming that two (one positive and one negative)cables are used for the connection).

	Distance up to 4'	Distance up to 6'	Ampere rating of battery fuse
PST-100S-12A	AWG # 2	AWG # 1/0	200A
PST-100S-24A	AWG # 8	AWG # 6	100A

**CAUTION!** The input section of the inverter has large value capacitors connected across the input terminals. As soon as the DC input connection loop [Battery (+) ⇒ fuse ⇒ inverter (+) ⇒ inverter (-) ⇒ battery (-)] is completed, these capacitors will start charging and will momentarily draw very heavy current that will produce sparking on the last contact in the input loop even when the on / off switch on the inverter is in the off position. Ensure that the fuse is inserted only after all the connections in the loop have been completed so that the sparking is limited to the fuse area.

### Using proper DC cable termination

The battery end and the inverter end of the cables should have proper terminals that will ensure a firm and tight connection.

### DC input terminals

The DC input terminals have a tubular hole with a set screw. A suitable pin type of copper terminal should, therefore, be used on the cable end. **Do not insert the stranded bare end of the cable directly into the tubular hole as the set screw will not pinch all the strands and will thus make only a partial and loose contact.** For thicker cables, a suitable adapter with pin type of termination should be used. **There should be no stray wire strands protruding from the terminals as these may produce a short circuit due to the close vicinity of the plus and minus terminals.**

A pair of pin type of terminal has been provided. Crimp these terminals on the inverter end of the cable. The terminal can accept up to AWG # 1/0

## **Reducing RF interference**

To reduce the effect of radiated interference, twist the DC side cables. To further reduce RF interference, shield the cables with sheathing /copper foil / braiding.

## **Taping battery cables together to reduce inductance**

Do not keep the battery cables far apart. In case it is not convenient to twist the cables, keep them taped together to reduce their inductance. Reduced inductance of the battery cables helps to reduce induced voltages. This reduces ripple in the battery cables and improves performance and efficiency.

## **AC SIDE CONNECTIONS**

### **Preventing paralleling of the AC output**

The AC output of the inverter cannot be synchronised with another AC source and hence, it is not suitable for paralleling. The AC output of the inverter should never be connected directly to an electrical breaker panel / load center which is also fed from the utility power / generator. Such a connection may result in parallel operation of the different power sources and AC power from the utility / generator will be fed back into the inverter which will instantly damage the output section of the inverter and may also pose a fire and safety hazard. If an electrical breaker panel / load center is fed from an inverter and this panel is also required to be powered from additional alternate AC sources, the AC power from all the AC sources like the utility / generator / inverter should first be fed to a manual selector switch and the output of the selector switch should be connected to the electrical breaker panel / load center.

To prevent possibility of paralleling and severe damage to the inverter, never use a simple jumper cable with a male plug on both ends to connect the AC output of the inverter to a handy wall receptacle in the home / RV.

### **Connecting to multi-wire branch circuits**

Do not directly connect the hot side of the 120 VAC of the inverter to the two hot legs of the 120 / 240 VAC electrical breaker panel / load centre where multi-wire ( common neutral ) branch circuit wiring method is used for distribution of AC power. This may lead to overloading / overheating of the neutral conductor and is a risk of fire.

A split phase transformer ( isolated or autotransformer ) of suitable wattage rating ( 25 % more than the wattage rating of the inverter ) with primary of 120 VAC and secondary of 120 / 240 VAC ( Two 120 VAC split phases 180 degrees apart) should be used. The hot and neutral of the 120 VAC output of the inverter should be fed to the primary of this transformer and the 2 hot outputs ( 120 VAC split phases ) and the neutral from the secondary of this transformer should be connected to the electrical breaker panel / load centre.

## AC output connections

The inverter uses (2) NEMA 5-15R receptacles for connecting the AC output to devices and appliances fitted with a NEMA 5-15P plug. In these NEMA 5-15 R receptacles, two rectangular slots are connected to the current-carrying conductors of the AC power source inside the inverter. The round slot is the "equipment grounding" connection and is internally connected to the metal chassis of the inverter.

**CAUTION!** : In these NEMA 5-15R receptacles, the current carrying conductor connected to the longer rectangular slot is isolated from the metal chassis of the inverter. Hence, when the metal chassis of the inverter is connected to the earth ground, the longer rectangular slot is not grounded to the earth ground. The longer rectangular slot is, therefore, not a "neutral". Do not touch this slot as it will be at an elevated voltage with respect to the metal chassis / earth ground and may produce an electrical shock when touched.

## Ground Fault Circuit Interrupter (GFCI)

An unintentional electric path between a source of current and a grounded surface is referred to as a "ground fault". Ground faults occur when current is leaking somewhere. In effect, electricity is escaping to the ground. How it leaks is very important. If your body provides a path to the ground for this leakage you could be injured, burned, severely shocked or electrocuted. A GFCI protects people from electric shock by detecting leakage and cutting off the AC source.

Installation in recreation vehicles (RV) may require GFCI protection on the AC output. In addition, electrical codes may require GFCI protection for certain residential applications.

**GFCI protection has been built-in on the main printed circuit board (PCB) of the unit.**

## Grounding to earth or to other designated ground

Please see details regarding grounding under "**AC Power Distribution and Grounding**" on page 9.

For safety, the metal chassis of the inverter is required to be grounded to the earth ground or to the other designated ground (For example, in a mobile RV, the metal frame of the RV is normally designated as the negative DC ground). An equipment grounding bolt with a wing nut has been provided for grounding the metal chassis of the inverter to the appropriate ground.

When using the inverter in a building , connect a # 8 AWG insulated stranded copper wire from the above equipment grounding bolt to the earth ground connection (a connection that connects to the ground rod or to the water pipe or to another connection that is solidly bonded to the earth ground ). The connections must be tight against bare metal. Use star washers to penetrate paint and corrosion.

When using the inverter in a mobile RV, connect a # 8 AWG insulated stranded copper wire from the above equipment grounding bolt to the appropriate ground bus of the RV ( usually the vehicle chassis or a dedicated DC ground bus ). The connections must be tight against bare metal. Use star washers to penetrate paint and corrosion.

# OPERATION

## Powering on the loads

After the inverter is switched on, it takes a finite time for it to become ready to deliver full power. Hence, always switch on the load(s) after a few seconds of switching on the inverter. Avoid switching on the inverter with the load already switched on. This may prematurely trigger the overload protection.

When a load is switched on, it may require initial higher power surge to start. Hence, if multiple loads are being powered, they should be switched on one by one so that the inverter is not overloaded by the higher starting surge if all the loads are switched on at once.

## Switching the inverter on / off

Before switching on the inverter, check that all the AC loads have been switched off.

The on / off switch (2) on the front panel of the inverter is used to switch on and switch off the inverter. This switch operates a low power control circuitry which in turn controls all the high power circuitry.

**CAUTION!** Please note that this switch is not switching the high power battery input circuit. Parts of the DC side circuit will still be alive even when the switch is in the off position. Hence, disconnect the DC and AC sides before working on any circuits connected to the inverter

When the inverter is switched on, the green LED indicator (3) will be lighted. This LED indicates that the inverter is operating normally. Under normal operating conditions, AC output voltage will now be available at the output receptacles.

Switch on the AC load(s). The green LED should remain lighted for normal operation of the load.

## Temperature controlled cooling fan

The cooling fan is thermostatically controlled. Temperature of a critical hot spot inside the inverter is monitored to activate the fan and the over temperature shut-down. When the temperature of this hot spot reaches a specified value, the fan is switched on. The fan will be automatically switched off once the unit cools down. **Please note that the fan may not come on at low loads or if the ambient temperature is cooler. This is normal.**

## Indications for normal operation

When the inverter is operating normally and supplying AC load(s), only the green LED (3) will be lighted. In case of abnormal operation, other displays and alarms will be activated. Please see under **"Protections Against Abnormal Conditions"** on page 25.

## Switching on / off using the optional remote on / off Remote Control

An optional corded Remote Control Model, No. RC-15, is available to enable switching on and off from a distance of 18 ft. The remote on / off control comes with 18 ft. of wire. One end of the remote control is plugged into the 6 position modular jack (9) provided on the inverter. **To use the remote control, the inverter is first required to be switched on from the on / off switch on the front panel.** Now, the inverter can be toggled between off / on conditions by pressing the push button on the remote control. The LED on the remote control will light when the inverter is in the on condition

### No load draw (idle current)

When the on / off switch is turned on, all the circuitry inside the inverter becomes alive and the AC output is made available. In this condition, even when no load is being supplied (or, if a load is connected but has been switched off), the inverter draws a small amount of current from the batteries to keep the circuitry alive and ready to deliver the required power on demand. This is called the idle current or the no load draw. Hence, when the load is not required to be operated, turn off the on / off switch on the inverter to prevent unnecessary current drain from the battery.

## PROTECTIONS AGAINST ABNORMAL CONDITIONS

The inverter has been provided with protections detailed below.

### Low DC input voltage warning alarm

The voltage at the DC input terminals will be lower than the voltage at the battery terminals due to the voltage drop in the battery cables and connectors. The drop in the voltage at the DC input terminals of the inverter could be due to lower battery voltage or due to abnormally high drop in the cables if the cables are not thick enough (Please read under **“Installation – Connection from the batteries to the DC input side of the inverter – cable and fuse sizes”** on page 20) If the voltage at the DC input terminals falls below 10.7 V for PST-100S-12A or 21.4 V for PST-100S-24A, a buzzer alarm will be sounded. The green LED (3) will continue to be lighted and the AC output voltage will continue to be available. This warning buzzer alarm indicates that the battery is running low and that the inverter will be shut down after sometime if the voltage at the inverter terminals further drops to 10 V for PST-100S-12A or 20 V for PST-100S-24A.

### Shut-down due to low DC input voltage

If the inverter continues to power the load after the low DC input voltage buzzer alarm is sounded, it will shut down temporarily when the DC input voltage further drops below 10 V for PST-100S-12A or 20 V for PST-100S-24A. The green LED (3) will be switched off and there will be no AC output voltage. The buzzer alarm will continue to sound. **The unit will reset automatically when the voltage of the battery rises to 11.5 V for PST-100S-12A or 23 V for PST-100S-24A.**

### Shut-down due to high DC input voltage

If the voltage at the DC input terminals exceeds 16.5 V for PST-100S-12A or 33 V for PST-100S-24A, the inverter will be shut down temporarily. The green LED (3) will be switched off and there will be no AC output. **The unit will be reset automatically when the voltage drops down to 16.7 V +/- 0.2 V for PST-100S-12A or 33.5 +/-0.2 V for PST-100S-24A.**

### Shut-down due to reversal of polarity at the DC input terminals

The positive of the battery should be connected to the positive DC input terminal of the inverter and the negative of the battery should be connected to the negative DC input terminal of the inverter. A reversal of polarity (the positive of the battery **wrongly connected** to the negative DC input terminal of the inverter and the negative of the battery **wrongly connected** to the positive DC input terminal of the inverter) will blow the DC side fuse(s) inside the inverter. If the DC side fuses are blown, the inverter will be dead. The green LED(3) will be switched off and there will be no AC output. **THE ABOVE DC SIDE FUSES MAY BE SOLDERED AND MAY NOT BE EASILY REPLACEABLE BY THE USER (WILL REQUIRE REMOVAL OF THE CIRCUIT BOARD).** Please call Technical Support to arrange for repair.

**NOTE: DAMAGE CAUSED BY REVERSE POLARITY WILL NOT BE COVERED BY WARRANTY!**

### Shut-down due to over-temperature

In case of failure of the cooling fan or in the case of inadequate heat removal due to higher ambient temperatures / insufficient air exchange, the temperature inside the unit will increase. The temperature of a critical hot spot inside the inverter is monitored and at a particular upper limit, the AC output of the inverter is shut down temporarily. The red **Over Temp** LED (5) is lighted and a buzzer is sounded. The unit will automatically reset after the unit has cooled down.

### Shut-down due to overload

The inverter can provide a higher than normal instantaneous (< 1 second) power limited to the surge power rating of the inverter. Also, the inverter can provide continuous power limited to the continuous power rating of the inverter. If either the continuous power or the instantaneous power is exceeded over a longer length of time, the AC output of the inverter is shut down permanently. The green LED (3) is switched off and the red overload LED (4) is lighted. **The inverter gets latched in this condition. To reset, the power on / off switch (2) is required to be switched off and on again.** Before switching on the inverter again, ensure that the cause of the overload is removed.

**NOTE:** If the red overload LED (4) remains lighted after resetting the unit, remove all the loads from the inverter and reset again. If the red overload LED (4) still remains lighted without any load, the inverter has developed an internal defect. Please call Tech Support.

## TROUBLESHOOTING GUIDE

<u>SYMPTOM</u>	<u>POSSIBLE CAUSE</u>	<u>REMEDY</u>
On switching on, the green LED does not light. Buzzer is off. There is no AC voltage.	There is no voltage at the DC input terminals	<ol style="list-style-type: none"> <li>1. Check the continuity of the battery input circuit.</li> <li>2. Check that the battery fuse is intact. Replace if blown.</li> <li>3. Check that all connections in the battery input circuit are tight</li> </ol>
	Polarity of the input voltage has been reversed that has blown the internal DC side fuses ( <b>Note: Reverse polarity may cause permanent damage</b> )	Visibly check the fuse element if it is blown. The fuses may be soldered and may not be easily replaceable. Call Technical Support for repair.
Low AC output voltage (No buzzer alarm).	Low input voltage at the inverter terminals and the load is close to the maximum allowable power	<ol style="list-style-type: none"> <li>1. Check that the battery is fully charged. Recharge, if low.</li> <li>2. Check that the battery cables are thick enough to carry the required current over the required length. Use thicker cables, if required.</li> <li>3. Tighten connections of the battery input circuit.</li> <li>4. Reduce the load.</li> </ol>
Buzzer alarm is sounded when load is switched on. Voltage at DC input terminals reads between 10 to 10.7 V for PST-100S-12A or between 20 to 21.4 V for PST-100S-24A. Green LED is on. AC output voltage is available	DC input voltage is less than 10.7 V for PST-100S-12A or less than 21.4 V for PST-100S-24A	<ol style="list-style-type: none"> <li>1. Check that the battery is fully charged. Recharge, if low.</li> <li>2. Check that the battery cables are thick enough to carry the required current over the required length. Use thicker cables, if required.</li> <li>3. Tighten connections of the battery input circuit</li> </ol>
Buzzer alarm is sounded when load is switched on. Voltage at the DC input terminals reads below 10 V for PST-100S-12A or below 20 V for PST-100S-24A. Green LED is off. There is no AC output	Shut-down due to low input DC voltage (Less than 10V for PST-100S-12A or less than 20 V for PST-100S-24A).	<ol style="list-style-type: none"> <li>1. Check that the battery is fully charged. Recharge, if low.</li> <li>2. Check that the battery cables are thick enough to carry the required current over the required length. Use thicker cables, if required.</li> <li>3. Tighten connections of the battery input circuit.</li> </ol>
There is no AC output. The green LED is off. Buzzer is on.	Shut-down due to high input DC voltage (> 16.5 V for PST-100S-12A or >33 V for PST-100S-24A).	<ol style="list-style-type: none"> <li>1. Check that the voltage at the DC input terminals is less than 16.5V for PST-100S-12A or less than 33 V for PST-100S-24A.</li> <li>2. Ensure that the maximum charging voltage of the battery charger / alternator / solar charge controller is below 16.5V for PST-100S-12A or below 33 V for PST-100S-24A.</li> <li>3. Ensure that an un-regulated solar panel is not used to charge a battery. Under cold ambient temperatures, the output of the solar panel may exceed 18 V for 12 V system or 36 V for 24 V system. Ensure that a charge controller is used between the solar panel and the battery</li> </ol>

### SYMPTOM

The AC output shuts down completely. The red overload LED is lighted. The green LED is off.

### POSSIBLE CAUSE

Permanent shut-down of the AC output due to continuous overload beyond the continuous power rating of the inverter.

### REMEDY

1. Reduce the load.
2. The load is not suitable as it requires higher power to operate. Use an inverter with higher power rating.
3. If the unit goes into permanent overload again after resetting and removing the load completely, the unit has become defective. Call Technical support.

Permanent shut-down of the AC output by the GFCI due to leakage > 5mA as a result of ground fault  
(For units with built-in GFCI)

1. Check for ground fault in the load circuit. (A ground fault will cause a minor shock on touching).

**Note:** The unit will be latched in this shut-down condition. To reset, switch the power on / off switch to off and then on again. Before switching on again, remove the cause of the shut-down.

Buzzer alarm is sounded. Red Over Temp LED is on. There is no AC output.

Shut-down due to over temperature because of fan failure or inadequate cooling as a result of high ambient temperature or insufficient air exchange

1. Check that the fan is working. If not, the fan / fan control circuit may be defective. Call Technical Support.
2. If the fan is working, check that the ventilation slots on the suction side and the openings on the discharge side of the fan are not obstructed.
3. If the fan is working and the openings are not obstructed, check that enough cool replacement air is available. Also check that the ambient air temperature is less than 40° C.
4. Reduce the load to reduce the heating effect.
5. After the cause of over heating is removed and the unit cools down, it will reset automatically.

## SPECIFICATIONS

### PST-100S-12A

### PST-100S-24A

Input Voltage.....	10.7 to 16.5 VDC .....	21.4 to 33 V DC
Input Current at No Load .....	< 0.8 A .....	< 0.6 A
Output Voltage .....	120 V AC +/- 3% .....	120 V AC +/- 3%
Output Frequency .....	60 Hz .....	60 Hz
Output Voltage Waveform.....	Sine Wave.....	Sine Wave
Total Harmonic distortion.....	< 3% .....	< 3%
Output Power		
-Continuous .....	1000 Watts* .....	1000 Watts*
-Surge (for <1 second).....	2000 Watts* .....	2000 Watts*

\* The power specified is for a resistive type of load which has power factor = 1. Reactive type of loads may have power factor of 0.8 to 0.6. The power that can be delivered to such type of loads will reduce by this factor. **See page 7 for details.**

Low Input Voltage Warning Alarm.....	10.7 V.....	21.4 V
Low Input Voltage Shut-down .....	10 V.....	20 V
High Input Voltage Shut-down .....	16.5 V.....	33 V
Operating Ambient Temp.....	0 to 40°C +/- 5°C.....	0 to 40°C +/- 5°C
Peak Efficiency .....	85%.....	85%
Cooling.....	Temperature Controlled Fan .....	
Connections:		
-Input .....	Tubular type screw down terminals.....	
-Output .....	2 x Standard North American Outlet (NEMA 5-15R) .....	

GFCI Protection..... Built-in on the PCB. Both NEMA5-15R output receptacles are protected..

DC Side Input Fuse.....40A x 4..... 40A x 2.....  
(Automotive Type ATC, 32V)

Dimensions( L x W x H) .....

Weight.....4 kg / 8.8 lbs.....

**Note:** Specifications are subject to change without notice.

## 2 YEAR Limited Warranty

The PST-100S-12A/PST-100S-24A manufactured by Samlex America, Inc. (the "Warrantor") is warranted to be free from defects in workmanship and materials under normal use and service. This warranty is in effect for 2 years from the date of purchase by the user (the "Purchaser")

For a warranty claim, the Purchaser should contact the place of purchase to obtain a Return Authorization Number.

The defective part or unit should be returned at the Purchaser's expense to the authorized location. A written statement describing the nature of the defect, the date of purchase, the place of purchase, and the Purchaser's name, address and telephone number should also be included.

If upon the Warrantor's examination, the defect proves to be the result of defective material or workmanship, the equipment will be repaired or replaced at the Warrantor's option without charge, and returned to the Purchaser at the Warrantor's expense.

No refund of the purchase price will be granted to the Purchaser, unless the Warrantor is unable to remedy the defect after having a reasonable number of opportunities to do so.

Warranty service shall be performed only by the Warrantor. Any attempt to remedy the defect by anyone other than the Warrantor shall render this warranty void.

There shall be no warranty for defects or damages caused by faulty installation or hook-up, abuse or misuse of the equipment including exposure to excessive heat, salt or fresh water spray, or water immersion.

No other express warranty is hereby given and there are no warranties which extend beyond those described herein. This warranty is expressly in lieu of any other expressed or implied warranties, including any implied warranty of merchantability, fitness for the ordinary purposes for which such goods are used, or fitness for a particular purpose, or any other obligations on the part of the Warrantor or its employees and representatives.

There shall be no responsibility or liability whatsoever on the part of the Warrantor or its employees and representatives for injury to any persons, or damage to person or persons, or damage to property, or loss of income or profit, or any other consequential or resulting damage which may be claimed to have been incurred through the use or sale of the equipment, including any possible failure of malfunction of the equipment, or part thereof.

The Warrantor assumes no liability for incidental or consequential damages of any kind.

Samlex America Inc. (the "Warrantor")  
110-17 Fawcett Road  
Coquitlam BC V3K6V2 Canada  
(604) 525-3836



**samlex**power

110-17 Fawcett Rd  
Coquitlam, B.C.  
Canada  
V3K 6V2

T: 604 525 3836  
F: 604 525 5221  
Toll Free: 1 800 561 5885

e-mail: [samlex@samlexpower.com](mailto:samlex@samlexpower.com)  
website: [www.samlexpower.com](http://www.samlexpower.com)